




Drill 5/16" Hole

1. Drill a 5/16" hole on the bottom of the enclosure
2. Insert the bulkhead end of the cable through the hole and secure with the lock washer and nut
3. Attach the right angle end of the cable to the BlueTOAD™ card
4. Attach the antenna to the bulkhead connector (on the exterior of the enclosure)
5. Place the antenna with the magnetic base on the steel mounting bracket (top)

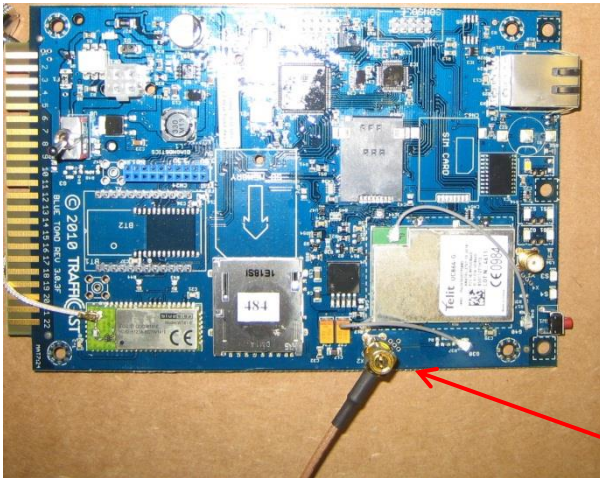

Cellular Antenna Connector is located here



Place Antenna Here